



MALE BAYONET INSTALLATION

- STEP (1.) WRAP INSULATION ON INNER LINE
POSITION BAYONET AS REQUIRED
- STEP (2.) CUT INNER LINE TO FIT AND
FUSION WELD TO ADAPTER
- STEP (3.) WELD OUTER JACKET TO ADAPTER

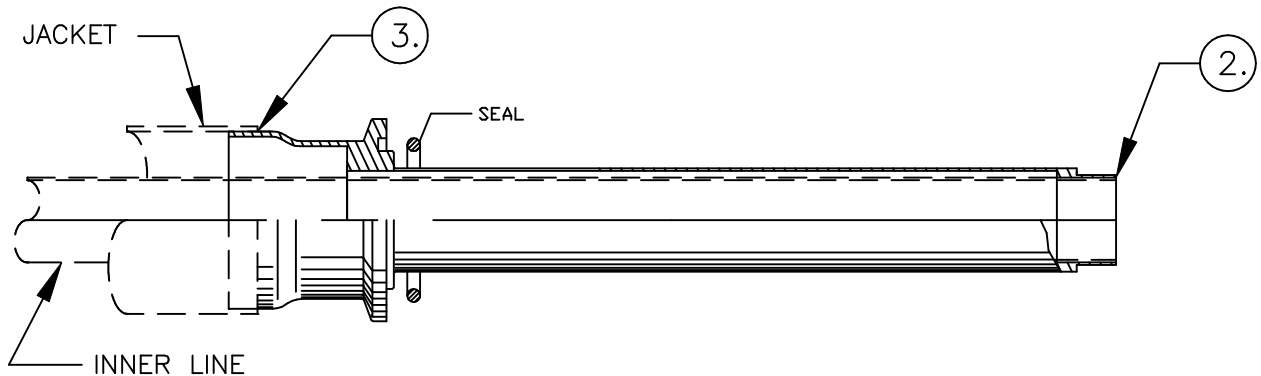

FEMALE BAYONET INSTALLATION

- STEP (1.) INSTALL FEMALE END OF INNER LINE & WELD
- STEP (2.) WRAP INSULATION ON INNER LINE & BAYONET
- STEP (3.) SLIDE JACKET OVER CUFF & WELD IN PLACE

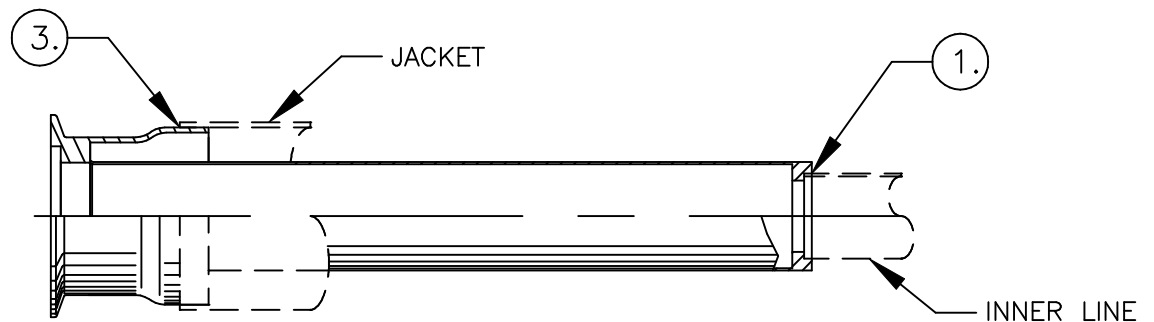

BAYONET INSTALLATION INSTRUCTIONS, PIPE SIZE BAYONET ASSEMBLIES

CRYOCOMP
CRYOGENIC AND VACUUM COMPONENTS

DWG NO.

B3000 SERIES