



## MALE BAYONET INSTALLATION

- STEP ① WRAP INSULATION ON INNER LINE  
POSITION BAYONET AS REQUIRED
- STEP ② CUT INNER LINE TO FIT AND  
FUSION WELD TO ADAPTER
- STEP ③ WELD OUTER JACKET TO ADAPTER

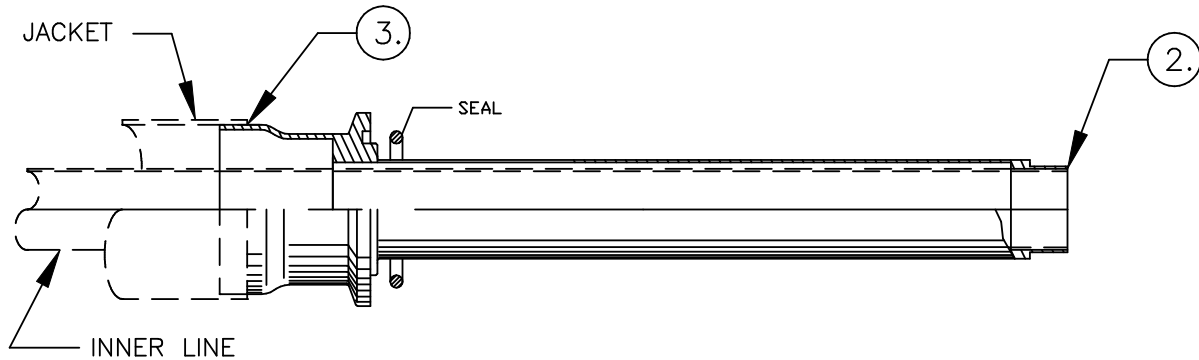

## FEMALE BAYONET INSTALLATION

- STEP ① INSTALL FEMALE END OF INNER LINE & WELD
- STEP ② WRAP INSULATION ON INNER LINE & BAYONET
- STEP ③ SLIDE JACKET OVER CUFF & WELD IN PLACE

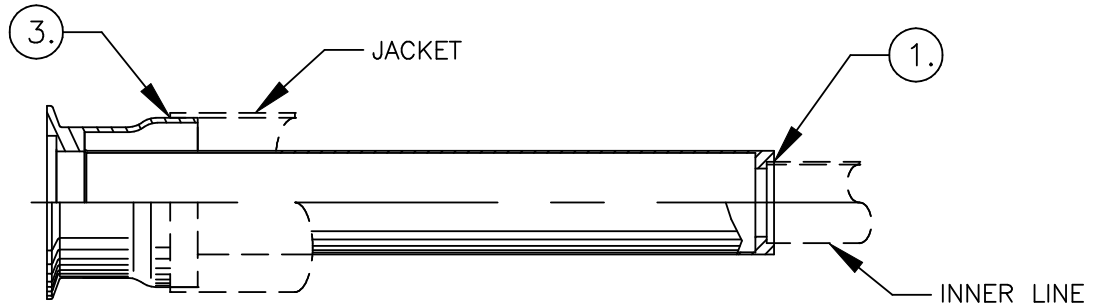

## BAYONET INSTALLATION INSTRUCTIONS, PIPE SIZE BAYONET ASSEMBLIES

**CRYOCOMP**  
CRYOGENIC AND VACUUM COMPONENTS

DWG NO.

B3000 SERIES



CRYOGENIC VALVES and VACUUM COMPONENTS  
sales@cryocomp.com ▼ 908.686.3643 ▼ www.cryocomp.com

a division of Cryofab, Inc.  
U21.11.15

